

Pressure Washing *(Continued from front)*

slight angle to the siding to allow the pressure stream to get under loose paint or stain and lift it off.

- Close all windows. Do not use the high pressure of the unit to rinse the windows. Glass damage may result. (To avoid streaking of window glass, Cabot recommends prewetting the glass with clear water and keeping it rinsed during the entire operation.)
- Do not spray directly at or into light fixtures and electrical outlets.
- Avoid using the pressure washer on very windy days to avoid damage related to overspray.
- Do not spray into gable-end vents, crawl spaces, or open eaves.
- Decks may also be cleaned with a pressure washer. The same rules apply, however, keep in mind the deck boards may be slippery.
- If the unit you rent is electrical, be sure a ground fault circuit interrupter (GFCI) is used to avoid a shock.
- Gasoline models are more mobile, but caution should be used in replacing gasoline when the engine is hot.
- Finally, Cabot suggests you practice on a surface which can not sustain damage like your concrete foundation. Practice makes perfect. Rest occasionally to avoid fatigue. Holding a unit at 2500 psi for a sustained period can be tiring.
- REMEMBER – NEVER POINT THE PRESSURE-WASHER WAND AT ANYONE!!



Cabot®
Newburyport, MA 01950
Tel.: 800-US-STAIN
Fax: 1-800-998-3299

Visit the Cabot Home Page at:
cabotstain.com